

Manual instruction - Ref 2906TM

1. Temperature range
 - Indoor : -10° to +50°C
 - Outdoor : -50° to +70°C
 - Resolution : 0,1 °C
 - Accuracy : +/- 1°C
2. Battery installation
 - The battery symbol on the display indicates that the battery needs to be replaced.
 - Remove battery cover on the backside of the thermometer. Insert a new battery into battery compartment and close it again. Make sure that polarity is correct!
3. Select temperature unit : °C / °F
4. Display :
 - 1st display « OUT » : outdoor temperature
 - 2nd display « IN » : indoor temperature
 - Press MAXI/MINI to display maximum and minimum outdoor temperature
 - Press RESET to reset maximum and minimum outdoor temperature values.
 - Press MAXI/MINI IN to display maximum and minimum indoor temperature
 - Press RESET to reset maximum and minimum indoor temperature values.

Under no circumstances measure live components with this device and external sensors

Do not use the device in explosionendangered areas!

The instrument should only be operated within the parameters specified in the Technical data.

The instrument should only be opened if expressly described in the instruction manual for maintenance purposes.

Force should never be applied.

The warranty shall not apply to batteries. The warranty shall not apply to any product which has been subject to misuse, neglect, accident, or abnormal conditions of operation or storage. In the event of failure under warranty, return this product to the distributor or retailer from whom it was purchased for replacement or repair. Purchaser's exclusive remedy under warranty shall be replacement, repair, or refund of the purchase price.

NOTE : Do not put into trash-bin. Please dispose old material and battery at the end of its service life in an ecologically suitable place according environment regulations.

