



Scan QR Code with your WebCam for downloading the user instruction manual.


Adventurer[™] Balances Quick Start Guide





Please download the user manual from www.ohaus.com.

1. ASSEMBLY


1) Unpack the balance

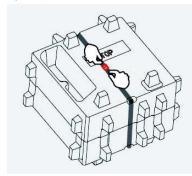

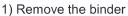

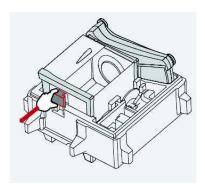

2) Take out the red cube

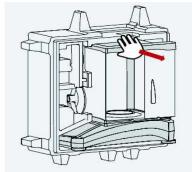


3) Take out the balance

For 1mg and 0.1mg Models:



2) Install Wind ring and weighing pan

Weighing pan (130mm) for 1mg model

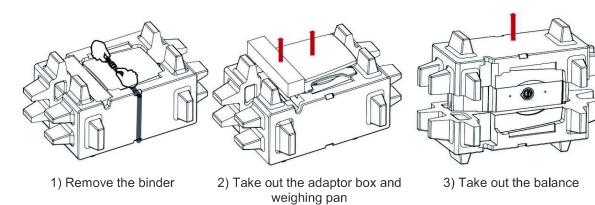

For 0.1g and 0.01g Models:



- Weighing pan (175x195mm) for 0.1g and 0.01g balance



Pan support, push the pan support to the end, tightly connect with cone.





Quick Start Guide

2. DEFINITION OF SIGNAL WARNINGS AND SYMBOLS

Safety notes are marked with signal words and warning symbols. These show safety issues and warnings. Ignoring the safety notes may lead to personal injury, damage to the instrument, malfunctions and false results.

Signal Words

WARNING For a hazardous situation with medium risk, possibly resulting in injuries or death

if not avoided.

CAUTION For a hazardous situation with low risk, resulting in damage to the device or

the property or in loss of data, or injuries if not avoided.

Attention For important information about the product Note For useful information about the product

Warning Symbols



General Hazard



Electrical Shock Hazard



Alternating current



Direct current

3. SAFETY PRECAUTIONS



CAUTION: Read all safety warnings before installing, making connections, or servicing this equipment. Failure to comply with these warnings could result in personal injury and/or property damage. Retain all instructions for future reference.

- Verify that the AC adapter's input voltage range and plug type are compatible with the local AC power to be used.
- Make sure that the power cord does not pose a potential obstacle or tripping hazard.
- The balance is for indoor use only.
- Use the balance only in dry locations.
- Do not drop loads on the pan.
- Use only approved accessories and peripherals.
- Operate the equipment only under ambient conditions specified in these instructions.
- Disconnect the equipment from the power supply when cleaning.
- Do not operate the equipment in hazardous or unstable environments.
- Service should only be performed by authorized personnel.
- Do not position the balance such that it is difficult to reach the power connection.

4. CONTROLS



Button	Action		
0	Short Press (if powered Off): Turns on the scale Long Press (if powered On): Turns off the scale Note: The balance will automatically power on when power is connected.		
Print	Short Press: Prints the present data to a printer or a computer.		
Zero	Short Press: Perform Zero operation		
Cal	Short Press: Perform Calibration operation		
Tare	Short Press: Perform Tare operation		

Main Application Screen

Application Instructional Messages Stability (*), Net (NET), Gross (G) and/or center

of zero (>0<) indicators

Reference Fields



Capacity and readability

Result Field: Information varies by application

Touch g to change unit

Application Buttons:

Functions vary by application

Adventurer™ Balances OHRUS



Main Menu

Calibration

Communication

Quick Start Guide

Weighing Units

Factory Reset

Exit

Data Maintenance

Lockout

Balance Setup

GLP and GMP Data

Back

5. MENU & SCREEN NAVIGATION

Touch Menu to open the menu list.



Calibration:

Touch to view calibration options.



Balance Setup:

Touch to view and change balance settings.



Weighing Units:

Touch to view and change weighing units.



Data Maintenance:

Touch to view data maintenance settings.



GLP and GMP Data:

Insert user data for traceability.



Communication:

Touch to view COM Device Settings and Print Settings.



Factory Reset:

Touch to do a Factory reset of menu settings.



Lockout:

Touch to view lockout options.

6. APPLICATIONS

The balance can be configured to operate in various Application modes. Touch the top left Application field (weighing in the example below):







Adventurer[™] **Balances**

The Adventurer Balance has 9 application modes, as follows:













Weighing

Parts Counting

Percent Weighing

Dynamic (Animal) Weighing

Determination

Check Weighing







Formulation

7. CONNECTING THE INTERFACE

Use the built-in RS-232 Port to connect either to a computer or a printer with a standard (straight-through) serial cable. Or connect using the scale's USB port.

Interface connections on the rear of the balance:



USB connection on the front of the balance:




USB1: Used to connect to PC only RS232: Used to connect to PC or Printer

USB2: Used to connect a USB flash driver only

8. WEIGH BELOW HOOK

To use this feature, remove power from the balance, then remove the protective cover for the weigh below opening.

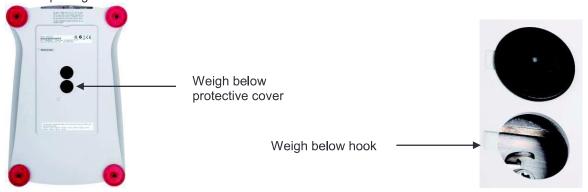



Ohaus Corporation 7 Campus Drive Suite 310 Parsippany, NJ 07054 USA Tel: +1 973 377 9000 Fax: +1 973 944 7177

With offices worldwide. www.ohaus.com



P/N 30111760B © 2018 Ohaus Corporation, all rights reserved.