



**MANUAL** 

**PART NUMBER** 

257091

RoHS

**(**E

## **Timer with 1 channel ClearLine**

## Setting

Press the "MIN" or "SEC" keys to set the required timing. To speed up the display press the keys for 3 seconds

## **Starting**

The countdown starts when you press the "START-STOP". At maturity, a beep will warn you 1 minute. To interrupt press the "START-STOP".

Note: Be careful to place equipment and used batteries in an environmentally appropriate place.

## Units:

1 timer

Dominique DUTSCHER SAS - 2C, rue de Bruxelles - 67170 BERNOLSHEIM
Tél : +33 (0)3 88 59 33 90 Fax : +33 (0)3 88 59 33 99 Mail : info@dutscher.com Web : www.dutscher.com