



# Defender<sup>®</sup> 5000 Indicators Instruction Manual



TD52XW



TD52P



## TABLE OF CONTENTS

<b>1. INTRODUCTION</b> .....	<b>5</b>
1.1 Safety Precautions .....	5
1.1.1 Relay Option Safety Precautions .....	5
1.2 Overview of Parts and Controls .....	6
1.3 Control Functions.....	9
<b>2. INSTALLATION</b> .....	<b>10</b>
2.1 Unpacking .....	10
2.2 External Connections.....	10
2.2.1 Scale Base with Connector.....	10
2.2.2 RS232 interface Cable to TD52P .....	10
2.2.3 AC Power to TD52P .....	10
2.2.4 AC Power to TD52XW.....	10
2.2.5 Battery Power.....	10
2.3 Internal Connections.....	11
2.3.1 Opening the Housing .....	11
2.3.2 Scale Base Without Connector .....	11
2.3.3 RS232 Interface Cable to TD52XW .....	13
2.3.4 MICRO SD Card Installation.....	14
2.4 TD52XW Rear Housing Orientation .....	14
2.5 Mounting Bracket .....	14
<b>3. SETTINGS</b> .....	<b>15</b>
3.1 Menu Structure .....	15
3.2 Menu Navigation.....	18
3.3 Calibration Menu .....	18
3.3.1 Zero Calibration .....	18
3.3.2 Span Calibration .....	19
3.3.3 Linearity Calibration .....	20
3.3.4 GEO Adjustment .....	21
3.4 Setup Menu .....	22
3.4.1 Capacity Unit.....	22
3.4.2 Range .....	22
3.4.3 Capacity .....	22
3.4.4 Graduation.....	23
3.4.5 Language .....	23
3.4.6 Power On Zero .....	23
3.4.7 Power On Unit .....	23
3.4.8 Key Beep.....	23

3.4.9 Transaction Counter .....	24
3.4.10 I/O Type .....	24
3.4.11 Reset .....	24
3.5 Readout Menu .....	24
3.5.1 Stability .....	24
3.5.2 Zero Range .....	24
3.5.3 Filter Level .....	25
3.5.4 Auto Zero Tracking .....	25
3.5.5 Auto Dim .....	25
3.5.6 ScreenSaver .....	25
3.5.7 Auto Off .....	25
3.5.8 Adjust Contrast .....	25
3.5.9 Reset .....	25
3.6 Discrete I/O .....	26
3.7 Weighing Unit .....	28
3.7.1 Gram (g) .....	28
3.7.2 Kilogram (kg) .....	28
3.7.3 Pound (lb) .....	28
3.7.4 Ounce (oz) .....	28
3.7.5 Pound: Ounce (lb: oz) .....	28
3.7.6 Tonne (Metric Tonne) .....	28
3.7.7 Ton (Short Ton) .....	28
3.7.8 Custom Unit (c) .....	28
3.8 GLP/GMP Menu .....	29
3.8.1 Date Format .....	29
3.8.2 Date .....	29
3.8.3 Time Format .....	29
3.8.4 Time .....	29
3.8.5 Project ID .....	29
3.8.6 Scale ID .....	29
3.8.6 Reset .....	30
3.9 Communication .....	30
3.9.1 RS232/2nd RS232 Configuration .....	30
3.9.2 Print Setup of RS232/2nd RS232 .....	31
3.9.3 RS485 Configuration .....	34
3.9.4 Ethernet Configuration .....	34
3.9.5 Wifi Configuration .....	34
3.9.6 Bluetooth Configuration .....	34

3.9.7 Analog Configuration .....	34
3.10 Maintenance Configuration .....	34
3.11 Lock Key Configuration .....	34
<b>4. OPERATION .....</b>	<b>35</b>
4.1 Weighing .....	35
4.1.1 Application Setup .....	35
4.1.2 Auto Tare .....	35
4.1.3 Accumulation .....	36
4.1.4 ID Input .....	37
4.1.5 Input/Output (I/O) Setup .....	37
4.2 Counting .....	38
4.2.1 Set the Average Piece Weight (APW) .....	38
4.2.2 Application Setup .....	39
4.2.3 Accumulation .....	40
4.2.4 Input/Output (I/O) Setup .....	40
4.3 Check .....	41
4.3.1 Check Weighing (default) .....	41
4.3.2 Check Counting .....	42
4.3.3 Application Setup .....	43
4.3.4 Input/Output (I/O) Setup .....	44
4.4 Percent Weighing .....	44
4.4.1 Establishing a Reference Weight .....	45
4.4.2 Application Setup .....	45
4.4.3 Input/Output (I/O) Setup .....	46
4.5 Dynamic Weighing .....	47
4.5.1 Application Setup .....	47
4.5.2 Average Time Setup .....	49
4.5.3 Input/Output (I/O) Setup .....	50
<b>4.5 Filling .....</b>	<b>51</b>
4.5.1 Establishing target weights .....	51
4.5.2 Application Setup .....	51
4.5.3 Input/Output (I/O) Setup .....	52
<b>5. SERIAL COMMUNICATION .....</b>	<b>54</b>
5.1 Interface Command .....	54
5.2 RS232 Interface .....	54
5.3 Connecting to a Computer .....	55
5.4 Connecting to a Serial Printer .....	55
5.5 Printouts .....	55

---

5.6 Printout Examples .....	56
<b>6. MICRO SD CARD/USB .....</b>	<b>57</b>
6.1 Library .....	57
6.2 User .....	60
6.3 Alibi .....	63
6.4 Editable .....	64
<b>7. LEGAL FOR TRADE .....</b>	<b>65</b>
7.1 Settings .....	65
7.2 Verification .....	65
7.3 Sealing .....	65
<b>8. MAINTENANCE.....</b>	<b>66</b>
8.1 Model T52P Cleaning .....	66
8.2 Model TD52XW Cleaning .....	66
8.3 Troubleshooting .....	66
8.4 Service Information .....	67
<b>9. TECHNICAL DATA .....</b>	<b>67</b>
9.1 Specifications .....	67
9.2 Accessories and Options .....	69
9.3 Drawings and Dimensions .....	70
9.4 Table of Geo Values .....	71
<b>10. COMPLIANCE .....</b>	<b>72</b>
<b>11. APPENDICES.....</b>	<b>74</b>
11.1 Appendix A .....	74
11.2 Appendix B .....	76