



## **Defender® 6000 Indicators Instruction Manual**

**Defender® 6000 Waagen  
Bedienungsanleitung**

**Indicadores Defender® 6000  
Manual de instrucciones**

**Manuel d'instructions sur les  
indicateurs de Defender® 6000**

**Indicatori® Defender 6000  
Manuale di istruzioni**



# Table of Contents

<b>1. INTRODUCTION .....</b>	<b>3</b>
1.1. SAFETY PRECAUTIONS .....	3
1.2. INTENDED USE .....	3
1.3. OVERVIEW OF PARTS AND CONTROLS .....	4
1.4. MAINBOARD .....	5
1.5. CONTROL FUNCTIONS .....	6
<b>2. INSTALLATION .....</b>	<b>9</b>
2.1. UNPACKING .....	9
2.2. EXTERNAL CONNECTIONS.....	9
2.2.1 <i>Scale Base with EasyConnect™ Connector.</i> .....	9
2.2.2 <i>Power input to i-DT61PW.....</i>	9
2.2.3 <i>AC Power to i-DT61XWE.....</i>	9
2.3 INTERNAL CONNECTIONS .....	9
2.3.1 <i>Opening the Housing.....</i>	9
2.3.2 <i>Scale Base without EasyConnect™ Connector.....</i>	11
2.3.3 <i>Communication Interface Cable to i-DT61PW.....</i>	14
2.3.4 <i>RS232 Interface Cable to i-DT61XWE .....</i>	15
2.4 MOUNTING BRACKET.....	15
<b>3. OPERATION .....</b>	<b>16</b>
3.1 TURNING THE SCALE ON/OFF.....	16
3.2 WEIGHING MODE .....	16
3.2.1 <i>Enter the Mode and Start Weighing .....</i>	16
3.2.2 <i>Accumulation and Statistics .....</i>	16
3.2.3 <i>Check .....</i>	17
3.2.4 <i>Application Settings .....</i>	18
3.3 COUNTING MODE.....	19
3.3.1 <i>Enter the Mode .....</i>	19
3.3.2 <i>Establish an APW .....</i>	19
3.3.3 <i>Start Counting .....</i>	19
3.3.4 <i>Application Settings .....</i>	19
3.4 PERCENT MODE .....	20
3.4.1 <i>Enter the Mode .....</i>	20
3.4.2 <i>Establish a Reference Weight.....</i>	20
3.4.3 <i>Start Percent Weighing .....</i>	20
3.4.4 <i>Application Settings .....</i>	20
3.5 DYNAMIC MODE.....	21
3.5.1 <i>Enter the Mode .....</i>	21
3.5.2 <i>Start Dynamic Weighing .....</i>	21
3.5.3 <i>Application Settings .....</i>	21
3.6 FILLING MODE.....	22
3.6.1 <i>Enter the Mode .....</i>	22
3.6.2 <i>Start Filling .....</i>	22
3.6.3 <i>Resume and Pause Filling.....</i>	22
3.6.4 <i>Display of the Dot Matrix Screen.....</i>	22
3.6.5 <i>Application Settings .....</i>	23
<b>4. MENU SETTINGS .....</b>	<b>24</b>
4.1 MENU NAVIGATION .....	24
4.1.1 <i>User Menu.....</i>	24
4.1.2 <i>Button Navigation .....</i>	25
4.2 CALIBRATION MENU.....	26
4.2.1 <i>Initial Calibration.....</i>	26
4.2.2 <i>Zero Calibration [ZERØ].....</i>	26
4.2.3 <i>Span Calibration [SPAN].....</i>	26
4.2.4 <i>Linearity Calibration [LIN].....</i>	27
4.2.5 <i>GEO Adjustment [GEO].....</i>	27
4.2.6 <i>Calibration Test [CALTEST] .....</i>	28

4.2.7	<i>End Cal [End]</i> .....	28
4.3	SETUP MENU .....	29
4.4	READOUT MENU .....	33
4.5	UNIT MENU.....	35
4.6	GLP/GMP MENU .....	35
4.7	COMMUNICATION .....	36
4.7.1	<i>RS232 Menu</i> .....	36
4.7.2	<i>Print Menu</i> .....	37
4.7.3	<i>RS485 Configuration</i> .....	40
4.7.4	<i>Ethernet Configuration</i> .....	40
4.7.5	<i>Analog Configuration</i> .....	40
4.8	MEMORY .....	40
4.8.1	<i>Memory menu (for i-DT61PW model)</i> .....	40
4.8.2	<i>USB memory (for i-DT61XWE model)</i> .....	40
4.8.3	<i>Alibi Memory (for i-DT61XWE model)</i> .....	41
4.9	DISCRETE I/O (FOR I-DT61XWE MODEL) .....	46
4.9.1	<i>I/O Type</i> .....	46
4.9.2	<i>Input</i> .....	47
4.9.3	<i>Output</i> .....	47
4.10	LOCK KEY CONFIGURATION .....	47
4.11	LIBRARY (FOR I-DT61XWE MODEL) .....	48
4.12	USER (FOR I-DT61XWE MODEL).....	50
4.13	USB (FOR I-DT61XWE MODEL) .....	52
4.13.1	<i>USB Flash Drive</i> .....	52
4.13.2	<i>RFID</i> .....	52
4.13.3	<i>Barcode</i> .....	52
4.13.4	<i>Keyboard</i> .....	52
4.13.5	<i>Wi-Fi/Bluetooth Dongle (Optional)</i> .....	53
5.	<b>LEGAL FOR TRADE</b> .....	55
5.1	SETTINGS.....	55
5.2	VERIFICATION.....	55
5.3	SEALING .....	55
6.	<b>MAINTENANCE</b> .....	57
6.1	CLEANING.....	57
6.1.1	<i>Cleaning for i-DT61PW Model</i> .....	57
6.1.2	<i>Cleaning for i-DT61XWE Model</i> .....	57
6.2	TROUBLESHOOTING .....	58
6.3	SERVICE INFORMATION .....	58
7.	<b>TECHNICAL DATA</b> .....	59
7.1	SPECIFICATIONS .....	59
7.2	TABLE OF GEO VALUES.....	61
8.	<b>COMPLIANCE</b> .....	62
9.	<b>APPENDICES</b> .....	64
9.1	APPENDIX A.....	64
9.2	APPENDIX B .....	66