



Defender® 6000 Indicators Instruction Manual

**Defender® 6000 Waagen
Bedienungsanleitung**

**Indicadores Defender® 6000
Manual de instrucciones**

**Manuel d'instructions sur les
indicateurs de Defender® 6000**

**Indicatori® Defender 6000
Manuale di istruzioni**

Table of Contents

1. INTRODUCTION	3
1.1. SAFETY PRECAUTIONS	3
1.2. INTENDED USE	3
1.3. OVERVIEW OF PARTS AND CONTROLS	4
1.4. MAINBOARD	5
1.5. CONTROL FUNCTIONS	6
2. INSTALLATION	9
2.1. UNPACKING	9
2.2. EXTERNAL CONNECTIONS.....	9
2.2.1 <i>Scale Base with EasyConnect™ Connector.</i>	9
2.2.2 <i>Power input to i-DT61PW.....</i>	9
2.2.3 <i>AC Power to i-DT61XWE.....</i>	9
2.3 INTERNAL CONNECTIONS	9
2.3.1 <i>Opening the Housing.....</i>	9
2.3.2 <i>Scale Base without EasyConnect™ Connector.....</i>	11
2.3.3 <i>Communication Interface Cable to i-DT61PW.....</i>	14
2.3.4 <i>RS232 Interface Cable to i-DT61XWE</i>	15
2.4 MOUNTING BRACKET.....	15
3. OPERATION	16
3.1 TURNING THE SCALE ON/OFF.....	16
3.2 WEIGHING MODE	16
3.2.1 <i>Enter the Mode and Start Weighing</i>	16
3.2.2 <i>Accumulation and Statistics</i>	16
3.2.3 <i>Check</i>	17
3.2.4 <i>Application Settings</i>	18
3.3 COUNTING MODE.....	19
3.3.1 <i>Enter the Mode</i>	19
3.3.2 <i>Establish an APW</i>	19
3.3.3 <i>Start Counting</i>	19
3.3.4 <i>Application Settings</i>	19
3.4 PERCENT MODE	20
3.4.1 <i>Enter the Mode</i>	20
3.4.2 <i>Establish a Reference Weight.....</i>	20
3.4.3 <i>Start Percent Weighing</i>	20
3.4.4 <i>Application Settings</i>	20
3.5 DYNAMIC MODE.....	21
3.5.1 <i>Enter the Mode</i>	21
3.5.2 <i>Start Dynamic Weighing</i>	21
3.5.3 <i>Application Settings</i>	21
3.6 FILLING MODE.....	22
3.6.1 <i>Enter the Mode</i>	22
3.6.2 <i>Start Filling</i>	22
3.6.3 <i>Resume and Pause Filling.....</i>	22
3.6.4 <i>Display of the Dot Matrix Screen.....</i>	22
3.6.5 <i>Application Settings</i>	23
4. MENU SETTINGS	24
4.1 MENU NAVIGATION	24
4.1.1 <i>User Menu.....</i>	24
4.1.2 <i>Button Navigation</i>	25
4.2 CALIBRATION MENU.....	26
4.2.1 <i>Initial Calibration.....</i>	26
4.2.2 <i>Zero Calibration [ZERØ].....</i>	26
4.2.3 <i>Span Calibration [SPAN].....</i>	26
4.2.4 <i>Linearity Calibration [LIN].....</i>	27
4.2.5 <i>GEO Adjustment [GEO].....</i>	27
4.2.6 <i>Calibration Test [CALTEST]</i>	28