

# Operation Manual

English



<b>cuvetteMIXdrive 1</b>	<b>Order no.: 40400</b>
<b>MIXdrive 1 XS</b>	<b>Order no.: 40300</b>
<b>MIXdrive 1 eco</b>	<b>Order no.: 40101</b>
<b>MIXdrive 1</b>	<b>Order no.: 40001</b>
<b>MIXdrive 6</b>	<b>Order no.: 40006</b>
<b>MIXdrive 15</b>	<b>Order no.: 40015</b>
<b>MIXdrive 60</b>	<b>Order no.: 40060</b>
<b>MIXdrive OEM</b>	<b>Order no.: 4xxxx</b>
<b>MIXdrive 1 XS HT</b>	<b>Order no.: 40303</b>
<b>MIXdrive 1 eco HT</b>	<b>Order no.: 40301</b>
<b>MIXdrive 1 HT</b>	<b>Order no.: 40201</b>
<b>MIXdrive 6 HT</b>	<b>Order no.: 40206</b>
<b>MIXdrive 15 HT</b>	<b>Order no.: 40215</b>
<b>MIXdrive 60 HT</b>	<b>Order no.: 40260</b>
<b>MIXdrive OEM HT</b>	<b>Order no.: 4xxxx</b>
	with
<b>MIXcontrol eco</b>	<b>Order no.: 90100</b>
<b>MIXcontrol eco DINrail (Poti)</b>	<b>Order no.: 90140</b>
<b>MIXcontrol eco DINrail (0-10V)</b>	<b>Order no.: 90150</b>
<b>MIXcontrol eco DINrail (RS232)</b>	<b>Order no.: 90160</b>
<b>MIXcontrol 20</b>	<b>Order no.: 90200</b>
<b>MIXcontrol 20 RS232</b>	<b>Order no.: 90210</b>
<b>MIXcontrol 20 DINrail (0-10V)</b>	<b>Order no.: 90220</b>
<b>MIXcontrol 20 DINrail (RS232)</b>	<b>Order no.: 90221</b>
<b>MIXcontrol 40</b>	<b>Order no.: 90400</b>
<b>MIXcontrol 40 RS232</b>	<b>Order no.: 90410</b>
<b>MIXcontrol 40 DINrail (0-10V)</b>	<b>Order no.: 90420</b>
<b>MIXcontrol 40 DINrail (RS232)</b>	<b>Order no.: 90421</b>