

Tel: 973-694-0500 * Fax: 973-694-7199 Internet Address: http://www.bel-art.com

Auto Secador Check List

Routine Maintenance

- 1. Observe if the drying module goes through its self test procedure when it is first plugged in. This should consist of 3 different stages.
- 2. Open door and observe if the red / green light is on inside the drying module.
- 3. Open door and observe if the silica gel beads are blue in color
- 4. Inspect door gaskets; the door gasket consists of sections of gasket material which may shift over time with the opening and closing of the door causing a gap to appear in between the sections thereby causing leaking. Daily
- 5. Door gasket may have taken a memory, this can be resolved by removing the gasket and turning over, it is important that the gasket sections meet when replacing the gasket in the door channel. Every 3-4 Months
- 6. If 1 thru 6 is okay, Suggest replacing the hygrometer.
- 7. If the beads do not begin to turn blue after 4 hours please call customer service for a replacement drying module or pre measured container of replacement silica gel beads. You will need the serial number in order for us to determine if you need a complete drying module or just the silica gel beads.

PLEASE NOTE THAT THE 25% RH MENTIONED IN THE MANUAL IS BASED ON THE CABINET BEING IN AN ENVIROMENT OF 70%, ENVIRONMENTS ABOVE 70% RH MAY INCREASE THE RH LEVEL INSIDE THE CABINET. ALSO THE 25% IS BASED ON THE ENVIRONMENTS BEING APPROX. 68°F, LOWER TEMPERATURES MAY AFFECT THE ABILITY OF THE HEATING UNIT TO REGERERATE THE DESICCANT SUFFICIENTLY. Replacement Parts List

420741001 - Shelf Vertical

420740001 - Shelf Horizontal

420701400 - Hygrometer

942070050 - Electronic Drying Module (115V & 220V)

942070053 - 115V Transformer/adapter

942070074 - 220V Transformer/adapter

420740020 – Pre measured desiccant