

SPECIFICATIONS

Display: ½" high 4-Digit LCD

Probe Range: -58.0 to 158.0°F/-50.0 to 70.0°C

Resolution: 0.1°

Accuracy: ±1°C (between -20 to 70°C)

THERMOMETER

To activate the battery, remove the insulating tape from the battery compartment. The battery is used to supply power to the unit during low light conditions.

DISPLAYING °F OR °C

Press the °C/°F switch to toggle display temperatures from Celsius to Fahrenheit

WALL MOUNTING

Convenient magnet on back allows for mounting of unit on any magnetic surface.

ALL OPERATIONAL DIFFICULTIES

If this thermometer does not function properly for any reason, please replace the battery with a new high quality battery (see "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

BATTERY REPLACEMENT

A faint display, no display, erratic readings, or operational difficulties indicate that the battery should be replaced. Remove the battery cover, located on the back of the unit, by pulling with thumb or forefinger in direction of the arrow. Replace the battery with a new 1.5V, G-13 battery. Equivalent battery replacements are: RAYOVAC RW42, DURACELL D357, and EVEREADY 357. Insert the battery with the positive side visible. Replace the battery cover.

DOMINIQUE DUTSCHER SAS

©2016 92-4123-40 Rev. 0 083116

**TRACEABLE®
SOLAR-POWERED
THERMOMETER
INSTRUCTIONS**