

| | | | | | | | |
|----|----|----|----|----|----|----|----|
| | EN | ES | IT | NL | DA | NO | AR |
| | FR | DE | PT | EL | FI | SV | RU |
| CS | HU | LV | PL | BG | SL | KO | TH |
| ET | LT | MT | RO | SK | TR | MS | ZH |

GPL



Europe

Ansell Healthcare Europe NV

Blvd International, 55

1070 Brussels, Belgium

☎ +32 2 528 74 00 📠 +32 2 528 74 01

www.anselleurope.com

United States

Ansell Healthcare

200 Schulz Drive, Red Bank NJ 07701

☎ +1 800 800 0444 📠 +1 800 800 0445

www.ansellpro.com

Japan

Ansell Japan Ltd.

Tokyo, Japan

☎ +81 3 5805 3781

Malaysia

Ansell Services (Asia) Sdn Bhd

☎ +60 3 5541 9797

Canada

105 Lauder Street, Cowansville J2K 2K8

☎ +1 800 363 8340

Australia

Ansell Limited

Level 3, 678 Victoria Street,

Richmond, Vic, 3121

☎ +61 1800 337 041 📠 +61 1800 803 578

www.ansellasiapacific.com

Ansell

ANSELL GENERAL PURPOSE GLOVES & SLEEVES

A. Use

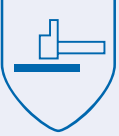



This Instruction for Use note is to be used in combination with the specific information that is mentioned on or inside each packaging enclosure.

These gloves, sleeves are designed to protect the hands and/or forearms against mainly mechanical and/or thermal risks. They are in conformity with, and are marked per the requirements, of the European Directive 89/686/EEC and its amendments. They also comply (=gloves) and are tested (=sleeves) in accordance to the applicable European Standards.

Gloves or sleeves which are accompanied with the pictogram which designates contact with foodstuffs, are also in conformity with the European Regulations 1935/2004 and 2023/2006 as well as with all applicable National Regulations for Food-contact materials.

Please ensure the gloves/sleeves are used only for the designated purposes.

Explanation of pictograms:

| | | | |
|--|---|--|--|
|  A B C D EN 388: 2003 | Protection from mechanical risks A: Abrasion resistance B: Cut resistance C: Tear resistance D: Puncture resistance |  A B C D E F EN 407: 2004 | Protection against heat A: Flammability B: Contact heat C: Convective heat D: Radiant heat E: Small splashes of molten metal F: Large quantities of molten metal |
|  A B C EN 511: 2006 | Protection from cold A: Convective cold B: Contact cold C: Water penetration |  | Suitable for contact with foodstuffs |

EC-Type examination certificate from Centexbel Belgium (I.D. 0493), Technologiepark 7, B-9052 Zwijnaarde. For more detailed information on the product's performance and to obtain a copy of the Conformity Declaration, please consult Ansell.

B. Precautions for use

1. NEVER USE THESE GLOVES/SLEEVES WITH CHEMICALS.
2. Gloves/sleeves should not be used when there is a risk of entanglement with moving machine parts.
3. Before usage, inspect the gloves/sleeves for any defects or imperfections. Avoid wearing damaged, dirty or worn out gloves/sleeves.
4. The gloves/sleeves should not come in contact with a naked flame.
5. Not all gloves/sleeves that are suitable for contact with foodstuffs can be used against all foodstuffs. Some gloves/sleeves may show excessive migration towards certain types of foodstuffs. To know which restrictions apply and for which specific foodstuffs the gloves/sleeves can be used, please obtain advise from the Ansell technical department or consult the Ansell Food Conformity declaration.
6. If gloves/sleeves are marked, the printed surfaces shall not come in contact with food.
7. Some glove type versions may have a length which falls below the minimum glove length as defined in EN 420:2003 – as shown in the table below. These gloves are 'Fit for Special Purpose gloves' because they are to be used to protect the hand ONLY from mechanical actions. Do not use these gloves when protection in the cuff area is needed. Please consult the Ansell Technical department or ask for the technical datasheet should you want to know the glove length of the glove(s).

| | | | | | | |
|---------------------------|-----|-----|-----|-----|-----|-----|
| Size | 6 | 7 | 8 | 9 | 10 | 11 |
| Minimum glove length (mm) | 220 | 230 | 240 | 250 | 260 | 270 |

C. Ingredients/Hazardous ingredients

Some gloves/sleeves might contain ingredients which are known to be a possible cause of allergies in sensitised persons, who may develop irritant and/or allergic contact reactions. If allergic reactions should occur, obtain medical advice immediately.

WARNING: THIS PRODUCT CONTAINS NATURAL RUBBER LATEX WHICH MAY CAUSE ALLERGIC REACTIONS

For more information, please contact Ansell's Technical department.

D. Care instructions

Storage: Keep away from direct sunlight; store in a cool dry place.
Keep away from ozone sources or naked flame.

Cleaning: Gloves/sleeves that can be laundered will carry Care pictograms, which will be depicted on the specific information on or inside each packaging enclosure. For these gloves/sleeves, the performance levels of the unused glove/sleeve will not be reduced after 1 laundering cycle.

However, the customer or launderer is responsible for the performance of the gloves after laundering. Ansell cannot be held liable for this.

E. Disposal

Used gloves/sleeves may be contaminated with infectious or other hazardous materials.

Dispose of according to Local Authority Regulations.

Landfill or incinerate under controlled conditions.