


**Ref 098496 - Pied à coulisse Vernier / Vernier caliper**

- Pied à coulisse acier carbone
- Capacité de mesure : 0 à 150 mm
- Lecture : 1/50 mm (0,02 mm)
- Double bec intérieur / extérieur
- Jauge de profondeur
- Blocage automatique

**Fig. 1 - Détail du Vernier**

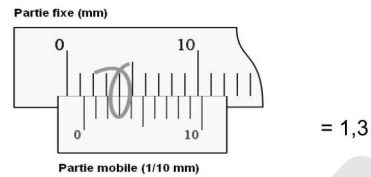

(Fig. 1) La partie fixe du pied à coulisse est graduée en millimètres (mm). La partie mobile coulissante comporte un trait (la marque 0 comme trait principal) permettant de lire la valeur précise au mm près. La partie coulissante comporte aussi une règlette, gradués de 1 à 9, et séparés de 0,9 mm. Le trait du vernier qui est en correspondance alignée avec un des traits de la partie fixe (quel qu'il soit) donne le chiffre au dixième de mm.

- Carbon steel caliper
- Range : 0 to 150mm
- Resolution : 1/50 mm (0,02 mm)
- Double edge inside / outside
- Depth gauge
- Automatic Blocking

(Fig. 1) The fixed part of the caliper is graduated in millimeters (mm). The sliding gauge shows a mark (mark 0 is main mark) making it possible to read the precise value in mm. The sliding gauge displays also a small scale, graduated from 1 to 9, and separated from 0,9 mm. Mark for sliding gauge which is in correspondance aligned with one of any mark of the fixed part gives the decimal digit.